

FRANKLIN ENGINE RG-10366 OIL PAN GASKET

FAA-PMA

MODELS: 6A4-145-A3; 6A4-150-B3; 6A4-165-B3; 6V4-178-B33; 6V4-200-C32/C33; 6V-335-A/B; 6A-350-C1/C2; 6A-335-B/B1; 6VS-335-A/B; 6VS-335-A/B.

INSTALLATION AND MAINTENANCE

- 1. All surfaces must be clean and dry, no lubrication of any type. These instructions also includes the threaded holes in the case.
- 2. Install gasket DRY.
- 3. **TORQUE TO 15 INCH POUNDS** gradually torquing around and across the cover to pull down evenly over the entire cover.
- PERFORM ENGINE RUN and CHECK FOR LEAKS.
- If there is a leak, <u>DO NOT CONTINUE TO TIGHTEN</u>.
 This will only make the leak worse.
 Remove the gasket and examine its condition.
 If it is still serviceable, wash it briefly in hot water and soap.
 Rinse gasket thoroughly and dry off. Reinstall.
- 6. To reuse the gasket, clean as described in Step # 4.

THE GASKET SURFACES MUST BE CLEAN AND DRY.

"CAUTION" DO NOT OVER TIGHTEN.

REAL GASKETS TENNESSEE

2120 West G Street, Elizabethton, TN 37643 U.S.A. 800-635-7325 423-543-6194

www.realgaskets.com

MADE IN THE USA